

# Wall Mounting Guide

Wall Mountable Switches

1910012439 REV1.0.0 June 2018

### 1.1 Which switches are wall mountable?

At present, the switches below are wall mountable:

TL-SG105, TL-SG108, TL-SG116, TL-SG105S, TL-SG108S, TL-SG1005D, TL-SG1008D, TL-SF1016D, TL-SF1024M, TL-SG1005P, TL-SF1005P, TL-SG105E, TL-SG108E, TL-SG116E, TL-SG108PE.

### **1.2 What tools should be prepared for wall mounting?**

Before mounting the switch, please prepare the tools below:

- » Two #4 or #6 screws.
- » A screw driver.

## **1.3** What is the distance between the two mounting holes and the size of the supported screws?

The distances varies form switch models, but they all support the same size of screws. The information is shown as below:

Model	Distance between the mounting holes	Radius of the mounting hole	Supported Screws
TL-SG105/TL-SG105E/ TL-SG105S/TL-SG1005P/ TL-SF1005P	52mm	4mm	#4,#6
TL-SG108/TL-SG108E/ TL-SG108S/TL-SG108PE	110mm	4mm	#4, #6
TL-SG1005D	60mm	4mm	#4, #6
TL-SG1008D	100mm	4mm	#4, #6
TL-SF1016D	157.2mm	4mm	#4, #6
TL-SF1024M	178mm	4mm	#4, #6
TL-SG116/TL-SG116E	200mm	4mm	#4, #6

#### **1.4 What is the procedure of wall mounting?**

On the bottom of the panel, there are two mounting holes. You need to drive two screws into the wall, then mount the switch on the wall.

- 1) Determine the location on the wall where you want to mount the switch.
- 2) Mark the wall where the two mounting holes are. The distance between the two marks must be as same as that between the two mounting holes of the switch.
- 3) Drive the screws into the wall at the marks using the screw driver.
- 4) Mount the switch on the wall.