1. Disassembly Procedures

- **S1** Turn off the monitor.
- S2 To remove the stand1. Place the monitor on a soft cloth or cushion

2. Press and hold the stand release button at the back of the display

3. Lift the stand assembly up and away from the monitor



S3

Unlock 4 screws on "Rear Cover"



(Screw Torque: 9±1 kgf)

S4 Use hands or "Bar Scraper" to disassemble "Rear Cover" from "Middle Frame" according to the sequence shown in the picture




S5 Pull out "Control board FFC" from "Interface board" and tear off it from "Main Shielding" to take off "Rear Cover"




S6 Unlock 3 screws to disassemble "Control board" from "Rear Cover"

> Tear off "Control board FFC" from "Rear Cover" and take off "Control board" from "Rear Cover"

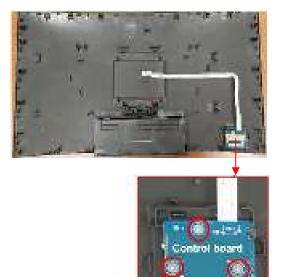

(Screw Torque: 1.6-1.8 kgf)





2

S8 Tear off 2 tapes from "Backlight wire"

Unplug "Backlight wire" from "LED Driver board" and "Panel"



S9 Tear off a black tape from "USB board FFC" and "Panel

Disassemble "USB board FFC" from "USB board" and "Interface board"

Unlock 1 screw on "USB board"


Disassemble "USB board" from "Middle Frame"




(Screw Torque: 4.5±0.5 kgf)

S10 Tear off a gasket from "USB Shielding" (see pink mark)

Tear off a gasket from "USB board" (see red mark)

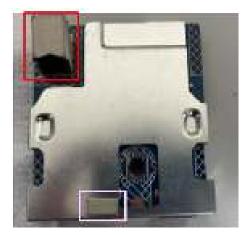


S11 Disassemble "USB board" from "USB Shielding"

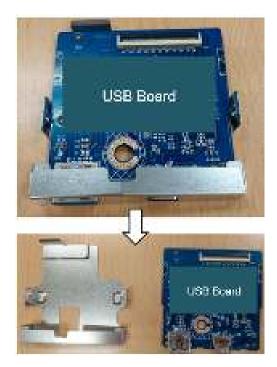

DELL P2425HEB

S12 Tear off 2 conductive tapes from "Main Shielding and "Panel"


3

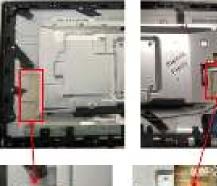



S13 Tear off an aluminum foil and a yellow tape from "LVDS FFC" on "Panel"





S14 Disassemble "LVDS FFC" from "Panel"

Take off "Main Shielding" from "Panel"



S15 Unlock 13 screws to disassemble "Middle Frame" from "Panel"

Take off "Middle Frame" from "Panel"



(Screw Torque: 4.5-5.0 kgf)

S16

Tear off two acetate tapes from the convex holes on "Panel



S17 Disassemble "MYLAR" from "Main Shielding"




S18 Unlock 7 PCBA screws



(Screw Torque: 9±1 kgf)

S19 Disassemble "LED Driver board", "Interface board" and "Power board" from "Main Shielding"

Unplug all cables from "Interface board"

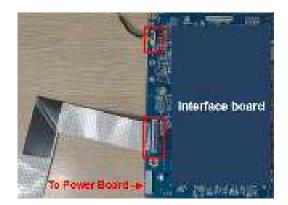


S20 Remove electrolyte capacitors (red mark) from printed circuit boards


5





S20-1 Cut the glue between bulk cap. and PCB with a knife

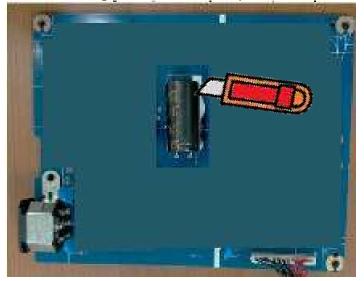


S20-2 Ensure cutting path within the glue, don't touch bulk cap. or PCB

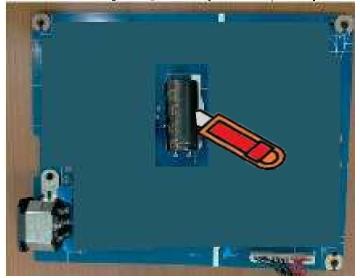



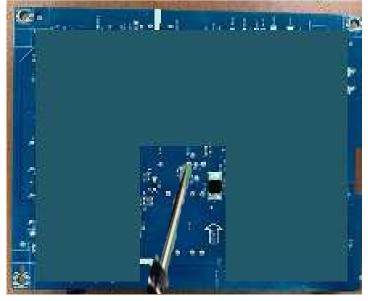

S20-4 Lift the bulk cap. up and away from the PCB

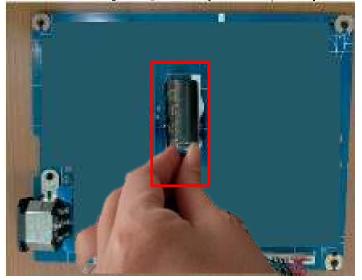

2. Product material information

7

The following substances, preparations, or components should be disposed of or recovered separately from other WEEE in compliance with Article 4 of EU Council Directive 75/442/EEC.

Capacitors / condensers (containing PCB/PCT)	No used
Mercury containing components	No used
Batteries	No used
Printed circuit boards (with a surface greater	Product has printed circuit boards
than 10 square cm)	(with a surface greater than 10 square
	cm)
Component contain toner, ink and liquids	No used
Plastic containing BFR	No used
Component and waste contain asbestos	No used
CRT	No used
Component contain CFC, HCFC, HFC and	No used
HC	
Gas discharge lamps	No used
LCD display > 100 cm2	Product has an LCD greater than 100
	cm2
External electric cable	Product has external cables
Component contain refractory ceramic fibers	No used
Component contain radio-active substances	No used
Electrolyte capacitors (height	Product has electrolyte capacitors
> 25mm, diameter > 25mm)	(height >25mm, diameter > 25mm)

3. Tools Required

List the type and size of the tools that would typically can be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description:

- Screwdriver
- Scraper Bar
- Penknife
- Soldering iron and absorber